

# Installation guide

## Safera extinguishing unit (CTU)



# 1. Installation

## ▲ WARNING

Read user manual before installing or replacing the extinguishing unit.


Service and replacement of the extinguishing unit (E) may only be done by service authorized by Safera.

Make sure that the hose is not squeezed after the installation. Minimum radius for the hose is 50 mm.

Highest allowed operation temperature for extinguishing unit (E) is 50°C.

## 📌 HINT

With some of the cooker hood models the extinguishing unit (E) is pre-installed in the factory: in that case ensure that the hose and the cable are properly connected.

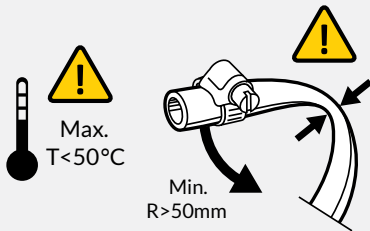

## 1.1 Mounting

Install extinguishing unit (E) on top of the cooker hood according to the figures below (either A or B) and steps 1-6 on the figures on the right.

